


OWNER'S MANUAL

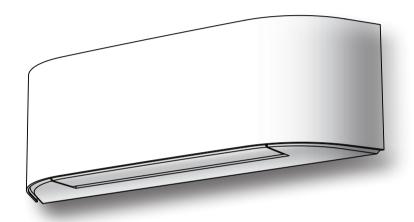

AIR CONDITIONER (SPLIT TYPE) For general public use **Indoor unit** 42GCVPH010, 013, 018-303P **Outdoor unit** 38GCVPH010, 013, 018-303P



PRECAUTIONS FOR SAFETY



Read the precautions in this manual carefully before operating the unit.



This appliance is filled with R32.

■ Warning indications on the air conditioner unit

Warning indication

Description



BURST HAZARD

Open the service valves before the operation, otherwise there might be the burst.

CAUTION

BURST HAZARD

Open the service valves before the operation, otherwise there might be the burst.

- Keep this manual where the operator can easily find it.
- Read the precautions in this manual carefully before operating the unit.
- This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.
- The precautions described herein are classified as DANGER, WARNING and CAUTION. They both contain important information regarding safety. Be sure to observe all precautions without fail.

⚠ DANGER

- Do not install, repair, open or remove the cover. It may expose you to dangerous voltages. Ask the dealer or the specialist to do this.
- Turning off the power supply will not prevent potential electric shock.
- The appliance shall be installed in accordance with national wiring regulation.
- Means for disconnection from the supply having a contact separation of at least 3 mm in all poles must be incorporated in the fixed wiring.
- The appliance must be stored in a room without continuously operating ignition sources (for example, open flames, an operating gas appliance or an operating electric heater).
- In order to avoid fire, explosion or injury, do not operate the unit when harmful gases (e.g. flammable or corrosive) are detected near the unit.

⚠ WARNING

- Do not expose your body directly to cool or warm air for a long time.
- Do not insert your finger or any article into the air inlet/outlet.
- When an abnormality (burning smell, etc.) occurs, stop the air conditioner and disconnect the power supply or turn off the breaker.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

1

 
PRECAUTIONS FOR SAFETY

- This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The air conditioner must be installed, maintained, repaired and removed by a qualified installer or qualified service person. When any of these jobs is to be done, ask a qualified installer or qualified service person to do them for you.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use any refrigerant different from the one specified (R32) for complement or replacement. Otherwise, abnormally high pressure may be generated in the refrigeration cycle, which may result in a failure or explosion of the product or an injury to your body.
- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Be aware that refrigerants may not contain an odour.
- Do not pierce or burn as the appliance is pressurized. Do not expose the appliance to heat, flames, sparks, or other sources or ignition. Else, it may explode and cause injury or death.

↑ CAUTION

- Do not wash the unit with water. It may cause an electric shock.
- Do not use this air conditioner for other purposes such as preserving food, breeding animal, etc.
- Do not step or put anything on the indoor/outdoor unit. It may cause an injury or damage the unit.
- Do not touch aluminium fin because it may cause an injury.
- Before cleaning the unit, turn off the main switch or the circuit breaker.
- When the unit won't be used for a long time, turn off the main switch or the circuit breaker.
- It is recommended that maintenance be performed by a specialist when the unit has been operated for a long time.
- The manufacturer shall not assume any liability for the damage caused by not observing the description of this manual.
- Remote controller and Holder are contained with magnet please keep far from product that effect with magnet (such as electronics appliance magnetic strip card and etc.)
- High temperature, high magnet field and direct force collisions may effect to magnet force down.

1 INDOOR UNIT DISPLAY



- ① ECO (White)
- 2 PURE (White)
- 3 Timer (White)
- Operation Mode
 Cool (Blue)
- Display brightness can be adjusted, follow procedure on (9).

2 PREPARATION BEFORE USE

Preparing Filters

- 1. Open the air inlet grille and remove the air filters.
- 2. Attach the filters. (see detail in the Installation Manual).

Loading Batteries (when use wireless operation.)


- 1. Remove the slide cover.
- 2. Insert 2 new batteries (AAA type) following the (+) and (–) positions.

Remote Control Reset

- 1. Remove the batteries.
- 2. Press 🦪 🐧 .
- 3. Insert the batteries.



3 AIR FLOW DIRECTION

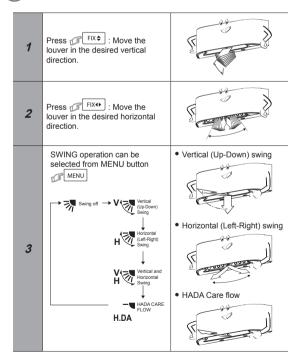



Note:

- Do not move the louver manually by hands or others.
- The louver may automation positioning by some operation mode.

4 REMOTE CONTROL

 - (1) Infrared signal emitter
- (2) Start/Stop button
- Mode select button
- 4 Temperature button
- (5) Fan speed button
- 6 Menu select button
- (7) Set louver Up-Down button(8) Set louver Left-Right button
- Check button*
- *Check button under battery cover



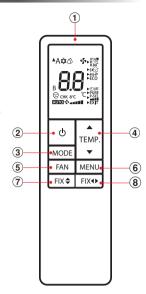

5 COOLING / FAN ONLY OPERATION

- 1. Press

 MODE: Select Cool

 , or Fan only

 .
- 2. Press TEMP. Set the desired temperature. Min. 17°C, Max. 30°C. Fan Only: No temperature indication

6 AUTOMATIC OPERATION

To automatically select cooling or fan only operation

- 1. Press MODE : Select Auto A.
- 2. Press TEMP. : Set the desired temperature. Min. 17°C, Max. 30°C.
- 3. Press FAN: Select AUTO, LOW →, LOW+ →, MED → MED+ → ME

7 DRY OPERATION


For dehumidification, a moderate cooling performance is controlled automatically.

- 1. Press MODE : Select Dry .
- 2. Press T TEMP. : Set the desired temperature. Min. 17°C, Max. 30°C.

Note: DRY mode fan speed is set to Auto only.

8 MENU SETUP

For select more setting of Air conditioner such as Louver select Hi POWER, OFF Timer and other use MENU button MENU

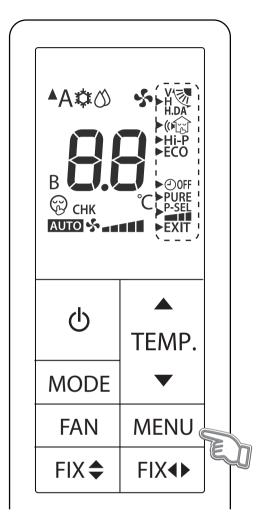

8.1 LOUVER SWING and HADA CARE FLOW OPERATION



Comfortable air flow can select from feature.

Louver swing opearation:



 To distribute air flow in both vertical and horizontal by swing the louver automatically.

HADA care flow operation:



 Air flow upward to the ceiling, provide Indirect air flow to body and homogenize room temperature.

Note:

During HADA CARE FLOW mode, FIX button cannot active.

Louver Swing and HADA Care Flow Operation Setting

1. Press MENU button for enter menu selection




During triangle mark blink ▶ can select menu by press TEMP. button.



Enter Louver set by press MENU button again. triangle mark will stop blink and setting feature will be blink instead.



3. Select Louver swing or HADA CARE FLOW by press TEMP. button.

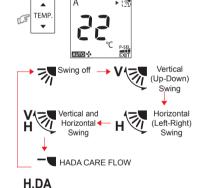

4. Confirm selected feature by press MENU button again.



MENU

When feature had selected will return to menu selection display triangle mark will blink $\boxed{lacktriangle}$

5. Leave from menu setting display by select exit and press menu button



Leave from menu setting to normal display (no triangle and feature blink).

8.2 SILENT OPERATION (Outdoor Unit)



Keep outdoor unit operating silently to ensure either yourself or neighborhood will have a tight sleep in nighttime. By this feature, the cooling capacity will be optimized to deliver such silent experience. The silent operation can be selected from one of two purposes (Silent 1 and Silent 2).

There are three setting parameters: Standard level > Silent 1 > Silent 2





- Though operating silently, the Cooling capacity is still prioritized to ensure having sufficient comfort inside the room.
- This setting is a perfect balance between the Cooling capacity and the Sound level of outdoor unit.

Silent 2:



- Compromising the Cooling capacity to the Sound level in any circumstance where the outdoor unit's sound level is highly prioritized.
- This setting has a purpose to reduce the maximum sound level of outdoor unit

Note:

While activating of Silent operation, inadequate cooling capacity may occur.

Silent Operation Setting

MENU

1. Press MENU button for enter menu selection




During triangle mark blink can select menu by press TEMP. button.



Enter SILENT set by press MENU button.
 triangle mark will stop blink and setting feature will be blink instead.



3. Select SILENT operation by press TEMP. button.

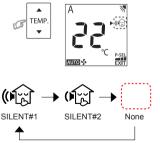

4. Confirm selected feature by press MENU button again.



When feature had selected will return to menu selection display triangle mark will blink

5. Leave from menu setting display by select EXIT.



8.3 Hi POWER OPERATION



To automatically control room temperature and airflow for faster cooling operation (except in DRY and FAN ONLY mode)

 
 Press MENU button for enter menu setting and press TEMP. button to select Hi POWER





2. Confirm selected feature by press MENU button again.





3. Leave from menu setting display by select EXIT.



8.4 ECO OPERATION

ECO

To automatically control room temperature to save energy (except in DRY and FAN ONLY mode)

 Press MENU button for enter menu setting and press TEMP. button to select ECO





Blink both triangle and feature mark Feature not yet set

2. Confirm selected feature by press MENU button again.



Blink only triangle Feature

3. Leave from menu setting display by select EXIT.





Note:

 Cooling operation; the set temperture will increase automatically 1 degree/hour for 2 hours (maximum 2 degrees increase).

8.5 TIMER OFF OPERATION



To set the timer OFF when the air conditioner is operating.

 
 Press MENU button for enter menu setting and press TEMP. button to select TIMER OFF.



Enter TIMER set by press MENU button. triangle mark will stop blink and setting feature will be blink instead.



3. Select TIMER OFF by press TEMP. button. Can select TIMER OFF from 0.5 - 12hrs.



4. Confirm TIMER OFF by press MENU button



5. Leave from menu setting display by select EXIT.



Note:

• The setting will be saved for the next same operation.

Cancel TIMER OFF

6. During TIMER OFF already set (no.5) press MENU button and press TEMP. button to select TIMER OFF.



7. Press MENU button again will cancel TIMER OFF.



8. Leave from menu setting display by select EXIT.



8.6 PLASMA ION OPERATION



Capture efficiency of floating impurities in the air is accelerated by plasma ion contaminates such as bacteria, odor, smoke, dust and virus are caught and deactivated by Plasma Ion.

 Press MENU button for enter menu setting and press TEMP. button to select PURF



2. Confirm selected feature by press MENU button again.



3. Leave from menu setting display by select EXIT.

MENU



Note:

- Plasma lon operation does not remove harmful substances from cigarette smoke (carbon monoxide etc.). Open a window occasionally for ventilation.
- Build up of dirt, smoke, or an extremely humid environment might cause the Plasma Ion operation to be malfunction. In that case, cleaning the air-con and let it dry prior operation are recommended.

8.7 POWER-SELECTION OPERATION



This function is used when the circuit breaker is shared with other electrical appliances. It limits the maximum current and power consumption to 100%, 75%, or 50% and can be implemented by POWER-SELECTION. The lower percentage, the higher saving and also longer compressor lifetime.

 
 Press MENU button for enter menu setting and press TEMP. button to select POWER-SEL



2. Enter POWER-SEL setting by press MENU button again.



3. Select POWER-SEL level by press TEMP. button.



4. Confirm POWER-SEL level by press MENU button.



5. Leave from menu setting display by select EXIT.



Note:

 Due to the reason that POWER-SELECTION function limits the maximum current, inadequate cooling capacity may occur.

9 DISPLAY LAMP BRIGHTNESS ADJUSTMENT

To decrease the display lamp brightness or turn it off.

- 1. Press and hold fram for 3 seconds until brightness level (dû, d l, d 2 or d 3) is shown on remote control LCD then release the button.
- 2. Press TEMP. Rise or TEMP. TEMP. to adjust brightness in 4 levels.

Remote control LCD	Operation display	Brightness
d3	来 本 () Lamp illuminates full brightness.	100%
95	乘峽 (C) Lamp illuminates 50% brightness.	50%
d !	Lamp illuminates 50% brightness and the operation lamp is turned off.	50%
40	ଞ୍ଚ ତ ଠ All lamps are turned off.	All turned off

• In the examples of d l and $d\Omega$, the lamp illuminates for 5 seconds before going off.

10 AUTO RESTART FUNCTION SETTING

This product is designed so that, after a power failure, it can restart automatically in the same operating mode as before the power failure.

Information

The product is shipped with Auto Restart function in the ON position. Turn it OFF if this function is not required.

How to turn OFF the Auto Restart Function

 Press and hold the [OPERATION] button on the indoor unit for 3 seconds (3 beep sounds but OPERATION lamp does not blink).

How to turn ON the Auto Restart Function

 Press and hold the [OPERATION] button on the indoor unit for 3 seconds (3 beep sounds and OPERATION lamp blink 5 time/sec for 5 seconds).

Notes :

 In case of ON timer or OFF timer are set, AUTO RESTART OPERATION does not activate.

SELF CLEANING OPERATION (COOL AND DRY OPERATION ONLY)

To protect bad smell caused by the humidity in the indoor unit.

- If the solution is pressed once during "Cool" or "Dry" mode, the fan will continue to run for other 30 minutes, then it will turn off automatically. This will reduce the moisture in the indoor unit.
- To stop the unit immediately, press the more 2 times within 30 seconds.

TEMPORARY OPERATION

In case of the misplaced or discharged remote control

- · Pressing the RESET button, the unit can start or stop without using the remote control.
- Operation mode is set on AUTOMATIC operation, preset temperature is 24°C and fan operation is automatic speed.



13 REMOTE CONTROL A-B SELECTION

To separate using of remote control for each indoor unit in case of 2 air conditioners are installed nearly.

 
Remote Control B Setup.

- 1. Press RESET button on the indoor unit to turn the air conditioner ON.
- 2. Point the remote control at the indoor unit.
- 3. Push and hold button on the back side of Remote Control "00" will be shown on the display. (Picture 1)
- 4. Press $\begin{picture}(20,0) \put(0,0){\line(1,0){100}} \put(0,0){\line$ "00" will disappear and the air conditioner will turn OFF. The Remote Control B is memorized. (Picture 2)

Note: 1. Repeat above step to reset Remote Control to be A.

- 2. Remote Control A has not "A" display.
- 3. Default setting of Remote Control from factory is A.





14 OPERATION AND PERFORMANCE

- 1. Three-minute protection feature: To prevent the unit from being activated for 3 minutes when suddenly restarted or switched to ON.
- Some minor cracking sound may occur when unit operating. This is normal because the cracking sound may be caused by expansion/contraction of plastic.

Air conditioner operating conditions

Temp.	Outdoor Temperature	Room Temperature
Cooling	−10°C ~ 46°C	21°C ~ 32°C
Dry	−10°C ~ 46°C	17°C ~ 32°C

15 MAINTENANCE

Firstly, turn off the circuit breaker.

Indoor Unit and Remote Control

- Clean the indoor unit and the remote control with a wet cloth when needed.
- No benzine, thinner, polishing powder or chemically-treated duster.

Air filters

Clean every 2 weeks.

- Open the air inlet grille.
 Remove the air filters.
- Vacuum or wash and then dry them.
- 4. Reinstall the air filters and close the air inlet grille.

TROUBLESHOOTING (CHECK POINT)

The unit does not operate. Cooling or Heating is abnormally low. The power main switch is The filters are blocked with dust. turned off. The temperature has been set improperly. The circuit breaker is activated to cut off the power supply. The windows or doors are opened. The air inlet or outlet of the outdoor Stoppage of electric current unit is blocked. The fan speed is too low. The operation mode is FAN or DRY. ON timer is set. POWER SELECTION function is set 75% or 50% (This function is depend on remote controller).

17 DECORATIVE FABRIC INSTALLATION

 
The decorative fabric for cover on the air inlet grille of indoor unit was put in the accessories. User can use it as required.

The method of installation is as follows.


Remove the air inlet grille.

Onen the air inlet grille unward and pull it tow


Open the air inlet grille upward and pull it toward you. As shown on figure as below.



 - 2. Prepare the fabric that you choose for install.
- Insert the fabric into the left and right side of the air inlet grille. Attach the hook and loop of velcro tape fully together. As shown on figure as below.



Insert the fabric into the top and bottom side of the air inlet grille.
 Attach the hook and loop of velcro tape fully together.
 As shown on figure as below.

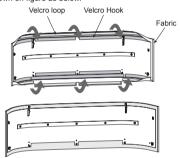




5. Reassembly the air inlet grille by reverse process of 1.

Note

 The tightness of the fabric depends on attaching the hook and loop of velcro around the air inlet grille, take appropriate action.

Maintenance & Shelf-life

 - Clean when dust stuck or covers the decorative fabric.
- Take extra care when cleaning the decorative fabric.
- Vacuum the decorative fabric with soft brush nozzle that use for cleaning on furniture or curtain.



 In case of getting heavy dirty on decorative fabric, please use dry cleaning service or wash by hand with warm water separated from other clothes (to avoid color staining), then line dry in the shade.

Note:

- Switch 'OFF' and unplug the air conditioner before removing the air inlet grille and decorative fabric.
- Ensure decorative fabric are completely dry before refitting to the air inlet grille.
- Do not put the decorative fabric in a dishwasher, washing machine, tumble dryer, oven, microwave or near an open flame.

CAUTION

- If clean decorative fabric by washing, it may affect to appearance and fitting of the decorative fabric.
- Recommend to use vacuum cleaner to removing the dusts from decorative fabric.



